



No.	ΠΕΡΙΓΡΑΦΗ
1	Chuck screw
2	Chuck
3	Screw
4	Clamping plate
5	Spring plate
6	Supporting block
7	Torq adjustment ring
8	Screwed sleeve
9	Torsion control spring
10	Screw
11	Adjustment plate
12	Washer
13	Front cap
14	Round pin
15	Steel ball
16	Output spindle
17	Ball bearing
18	Bearing shield
19	Ball bearing
20	Conversion bush
21	Spring
22	Spring support shield
23	Rotating ratchet wheel
24	Fixed ratchet wheel
25	Slide bush
26	Front gear housing
27	Support washer
28	Internal gear, third tier
29	Planet gear support, third tier
30	Planet gear, third tier
31	Front cap washer of gearbox
32	Central gear, third tier
33	Planet gear, second tier
34	Screw
35	Swinger
36	Rear cover of gear housing
37	Shifting gear
38	Screw
39	Central gear, second tier
40	Planet gear, first tier
41	Internal gear, first tier
42	Rear cap washer
43	Motor bracket
44	Screw
45	Spring washer
46	Pinion
47	Motor
48	Motor rear cap
49	Variable speed switch
50	Screw
51	Contact negative polar
52	Contact positive polar
53	Contact base
54	Left housing M9206
55	Forward/reverse pusher M9206
56	Lanyard
57	Quick charger
58	Battery pack
59	Bubble level
60	High/low speed selection pusher
61	Right housing
62	Screw
63	Screw
64	Auxiliary handle bracket
65	Hex screw bolt
66	Auxiliary handle

No.	ΠΕΡΙΓΡΑΦΗ
34	Screw
35	Swinger
36	Rear cover of gear housing
37	Shifting gear
38	Screw
39	Central gear, second tier
40	Planet gear, first tier
41	Internal gear, first tier
42	Rear cap washer
43	Motor bracket
44	Screw
45	Spring washer
46	Pinion
47	Motor
48	Motor rear cap
49	Variable speed switch
50	Screw
51	Contact negative polar
52	Contact positive polar
53	Contact base
54	Left housing M9206
55	Forward/reverse pusher M9206
56	Lanyard
57	Quick charger
58	Battery pack
59	Bubble level
60	High/low speed selection pusher
61	Right housing
62	Screw
63	Screw
64	Auxiliary handle bracket
65	Hex screw bolt
66	Auxiliary handle