



No.	ΠΕΡΙΓΡΑΦΗ	ΠΟΣ.
1	Rear cover	1
2	Soft start	1
3	Top rail	1
4	Motor housing	1
5	Brushes	2
6	Carbon brush 6×12×17	2
7	Brush holder	2
8	Brush spring	2
9	Switch	1
10	Capacitance	1
11	Ball bearing CSR608RZ	1
12	The stator 1600W	1
13	Flat pad mat 18×8×0.5	1
14	Rotor 1600W	1
15	Cable sleeve	1
16	Cable	1
17	Cable pressing plate	
18	Under rail	1
19	Connecting line 42CM	1
20	Flat pad 18×10×0.5	1
21	Ball bearing CSR629RSL	1
22	Wool felt 21×9×2	1
23	O-ring	1
24	Center cover	1
25	Paper pad	1
26	Cross tapping screw ST4.2×16	20
27	Governor	1
28	Cross tapping screw ST4×65s	2

No.	ΠΕΡΙΓΡΑΦΗ	ΠΟΣ.
29	Ball bearing CSR608Z	4
30	Shaft ring Ø15	1
31	Shaft ring Ø17	1
32	Output shaft	1
33	Flat mat 5X5X8	1
34	Hole retaining ring Ø35	1
35	Ball bearing CSR6003RZ	1
36	Ball bearing CSR607Z	1
37	Change gear set	1
38	The second gear shaft	1
39	The third gear	1
40	First helical gear	1
41	First axis	1
42	TOP shift plate	1
43	Under shift plate	1
44	Shift plate spring	2
45	Dialing rod	1
46	Head shell	1
47	Small steel ball	1
48	Small Spring	1
49	Within the knob gear	1
50	Gear knob	1
51	Cross tapping screw ST4×14	1
52	Cross tapping screw ST5×45	4
53	Oil seal 35×22×7	1
54	Stir bar	1
55	Mixing head 140mm	1